

DIPPING PREP SHEET

1182 Bethel Drive

Eugene, Oregon 97402

1-877-412-8806

info@metaldipping.com




Customer Prep Before Dipping

Remove All

- Nuts
- Bolts
- Screws
- Clips
- Springs
- Emblems
- Wiring
- Clamps / Hoses / Lines
- Tape
- Wood
- Insulation
- Aluminum
- Dynamat or other aftermarket sound deadner
- Rubber and Plastic Grommets & Plugs
- Loose Debris (shop vac or pressure wash to remove all loose debris, garbage, dirt, screws, and all other loose material of any kind)
- Do Not Leave Bolts Anywhere
- Do Not Leave Removable Trunk Springs In Your Vehicle
- Do Not Use Tube Steel For Bracing, Use Angle
- Do Not bring your car on a rotisserie

We want to clean each and every part the very best we can. Proper preparation is the key first step. If it's welded it stays.

Anything not welded together comes apart. If you find yourself wanting to ask "what about....." please refer to the instructions above.

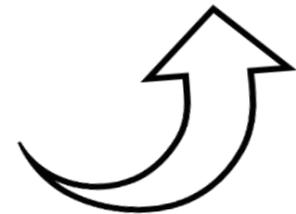

Incomplete prep billed at \$100/hour (15 minute minimum charge)